


Customize your modes

- Modi anpassen
- Personnalisez vos modes
- Personalice sus modos
- Personalizzare le modalità
- Pas uw modi aan
- Anpassa lägen

1 Connect

- Anschließen
- Connecter
- Conectar
- Collegare
- Aansluiten
- Anslut

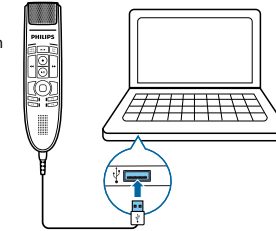

2 Software


- Software
- Logiciel
- Software
- Software
- Software
- Programvara

Philips SpeechControl software
www.dictation.philips.com/speechcontrol



3 Install


- Installation
- Installation
- Instalación
- Installazione
- Installatie
- Installation

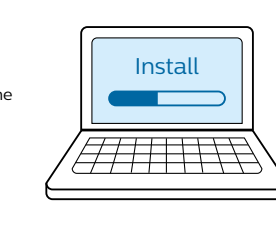


4 Configure

- Konfiguration
- Configuration
- Configuración
- Configurazione
- Configuratie
- Konfiguration






www.speechmike.com/premium-touch/support

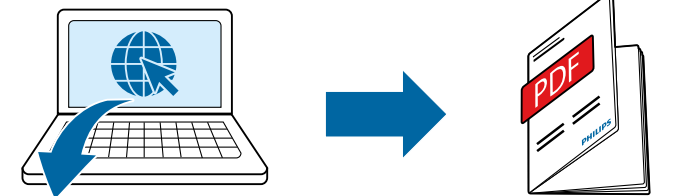

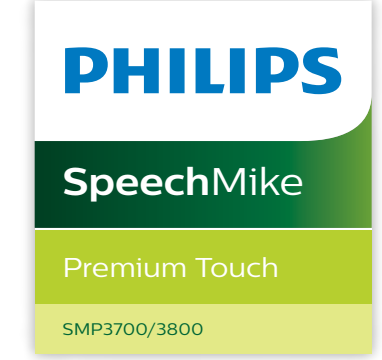

© 2020 Speech Processing Solutions GmbH. All rights reserved.
 Specifications are subject to change without notice. Philips and the Philips shield emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.
 Document version 4.0, 29/05/2020, 7737 003 2010.4





- EN** Quick start guide
- DE** Kurzanleitung
- FR** Guide de démarrage rapide
- ES** Guía de inicio rápido
- IT** Guida rapida di introduzione
- NL** Snelle startgids
- SV** Snabbstartsguide




 
For product information and support, visit
www.speechmike.com/premium-touch/support



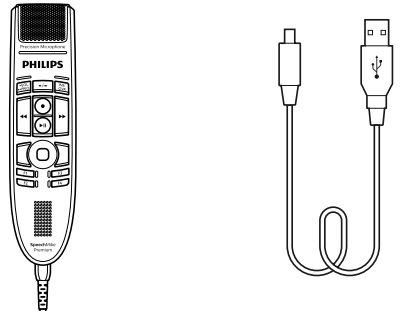








Select your button mode

- Tastenmodus auswählen
- Selezione su modo de botones
- Selecteer uw toetsenmodus

- Sélectionnez votre mode des boutons
- Selezionare una modalità pulsante
- Välj ett knappläge

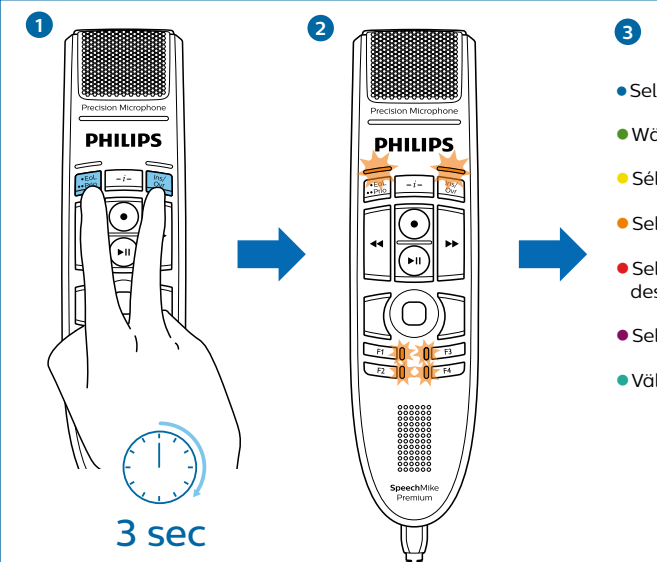

- Select your mode
- Wählen Sie Ihren Modus
- Sélectionnez votre mode
- Selezione su modo
- Selezionare la modalità desiderata
- Selecteer uw modus
- Välj ett läge

F1	<ul style="list-style-type: none"> Event mode (default) Befehlsmodus (Standardeinstellung) Mode de commande (par défaut) Modo comando (predeterminado) Modalità comando (predefinita) Opdrachtmodus (standaard) Ätgärdsläge (standard)
F2	<ul style="list-style-type: none"> Keyboard mode Mode clavier Modalità tastiera Tangentbordsläge Tastaturmodus Modo teclado Toetsenbordmodus
F3	<ul style="list-style-type: none"> Browser mode Mode navigateur Modalità browser Webbläsarläge Browsermodus Modo navegador Browsermodus
F4	<ul style="list-style-type: none"> Windows speech recognition mode Windows Spracherkennungsmodus Mode de reconnaissance vocale Windows Modo reconocimiento de voz Windows Modalità riconoscimento vocale Windows Windows-spraakherkenningsmodus Läget Windows taligenkänning
EoL	<ul style="list-style-type: none"> Dragon for Mac mode Mode Dragon pour Mac Modalità Dragon per Mac Dragon-läge för Mac Dragon-Modus für Mac Modo Dragon para Mac Dragon-modus voor Mac
Prio	<ul style="list-style-type: none"> Dragon for Windows mode Mode Dragon pour Windows Modalità Dragon per Windows Läget Dragon för Windows Dragon-Modus für Windows Modo Dragon para Windows Dragon-modus voor Windows
Ins/Ovr	<ul style="list-style-type: none"> Dragon for Windows mode Mode Dragon pour Windows Modalità Dragon per Windows Läget Dragon för Windows Dragon-Modus für Windows Modo Dragon para Windows Dragon-modus voor Windows

i Find more information on all button modes here: www.speechmike.com/premium-touch/support

Weitere Informationen zu allen Tastenmodi finden Sie hier: www.speechmike.com/premium-touch/support

De plus amples informations sur les modes des boutons sont disponibles ici : www.speechmike.com/premium-touch/support

Encuentre más información acerca de todos los modos de botones aquí: www.speechmike.com/premium-touch/support

Ulteriori informazioni su tutte le modalità pulsante sono disponibili qui: www.speechmike.com/premium-touch/support


Hier vindt u meer informatie over alle toetsenmodi: www.speechmike.com/premium-touch/support

För mer information om alla knapplägen: www.speechmike.com/premium-touch/support

Overview (Event mode)

- Übersicht (Befehlsmodus)
- Descripción general (Modo comando)
- Overzicht (Opdrachtmodus)

- Présentation (Mode de commande)
- Panoramica (Modalità comando)
- Översikt (Ätgärdsläge)

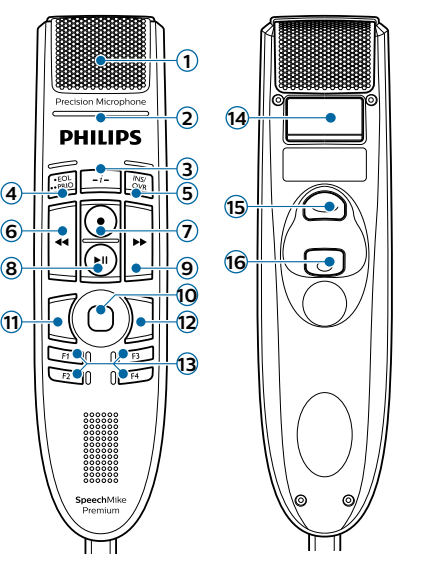

- Microphone
- Record indicator light
- Instruction
- End-of-letter (EOL), priority
- Insert/overwrite
- Rewind
- Record
- Play/pause
- Fast-forward
- Touch navigation/left mouse button
- Left mouse button
- Right mouse button
- Programmable function keys
- Mikrofon
- Micrófono
- Mikrofoon
- Aufnahme-Kontrolleuchte
- Luz indicadora de grabación
- Controlelampje opname
- Anweisung
- Instrucción
- Instructie
- Briefende (EOL), Priorität
- Fin-de-carta (EOL), prioridad
- Einde-brief (EOL), prioriteit
- Einfügen/Überschreiben
- Insertar/sobrescribir
- Invoegen/overschrijven
- Rücklauf
- Rebobinado
- Terug
- Aufnahme
- Grabar
- Opname
- Wiedergabe/Pause
- Reproducir/pausa
- Afspelen/pauze

- Pulsanti funzione programmabili
- Programmeerbare functietoetsen
- Programmerbara funktionsknappar
- Bar code scanner (SMP3800)
- Barcodeleser (SMP3800)
- Scanner de code-barras (SMP3800)
- Escáner de código de barras (SMP3800)
- Lettore codici a barre (SMP3800)
- Barcodeleser (SMP3800)
- Streckkodsläsare (SMP3800)
- Command button (SMP3700)
- Befehlstaste (SMP3700)
- Bouton de commande (SMP3700)
- Botón de comando (SMP3700)
- Pulsante di comando (SMP3700)
- Commandknop (SMP3700)
- Vänster musknapp (SMP3700)
- Scan button (SMP3800)
- Scantaste (SMP3800)
- Bouton de scan (SMP3800)
- Botón escanear (SMP3800)
- Pulsante di scansione (SMP3800)
- Scanknop (SMP3800)
- Skanningsknapp (SMP3800)
- Left mouse button
- Linke Maustaste
- Bouton gauche de souris
- Botón izquierdo del ratón
- Pulsante sinistro del mouse
- Linker muisknop
- Vänster musknapp