




### Customize your modes

- Modi anpassen
- Personalice sus modos
- Personalizzare le modalità
- Pas uw modi aan
- Personnalisez vos modes
- Personalizzare le modalità
- Anpassa lägen

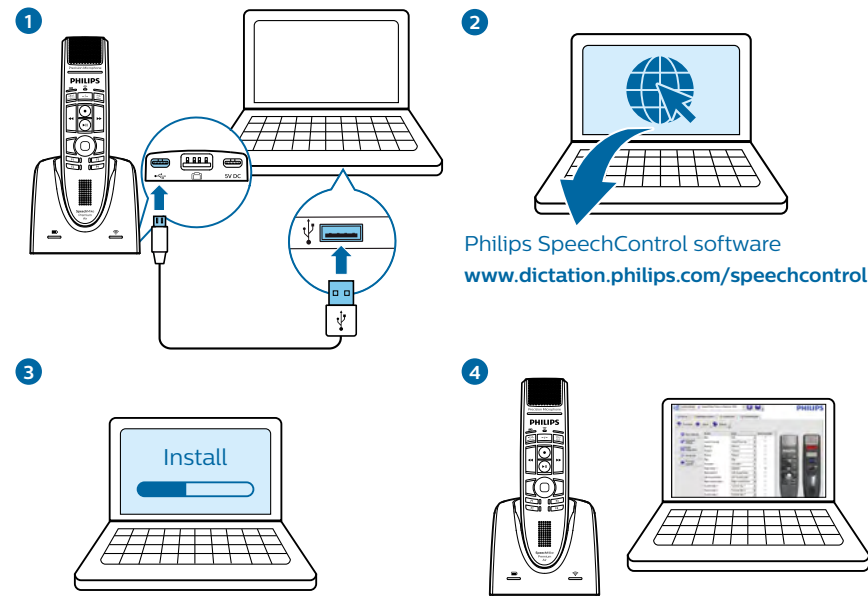

Philips SpeechControl software  
[www.dictation.philips.com/speechcontrol](http://www.dictation.philips.com/speechcontrol)



© 2021 Speech Processing Solutions GmbH. All rights reserved.

Specifications are subject to change without notice. Philips and the Philips shield emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

Document version 3.0, 2021/05/07, 7740 003 2010.3

# PHILIPS

## SpeechMike


### Premium Air

SMP4000




- EN** Quick start guide
- DE** Kurzanleitung
- FR** Guide de démarrage rapide
- ES** Guía de inicio rápido
- IT** Guida rapida di introduzione
- NL** Snelle startgids
- SV** Snabbstartsguide


View the full manual online:  
[help.speechmike.com/smp4000](http://help.speechmike.com/smp4000)

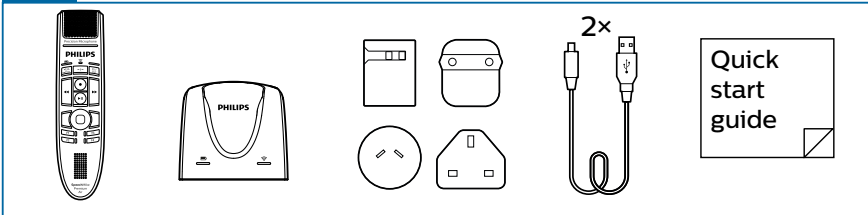

1

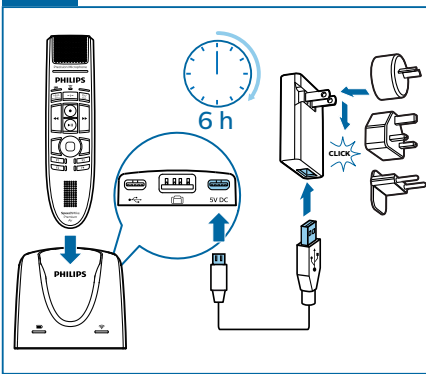


2

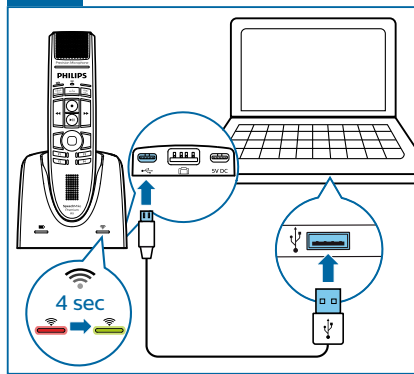



### Select your button mode

- Tastenmodus auswählen
- Selección su modo de botones
- Selecteer uw toetsenmodus
- Sélectionnez votre mode des boutons
- Selezionare una modalità pulsante
- Välj ett knappläge

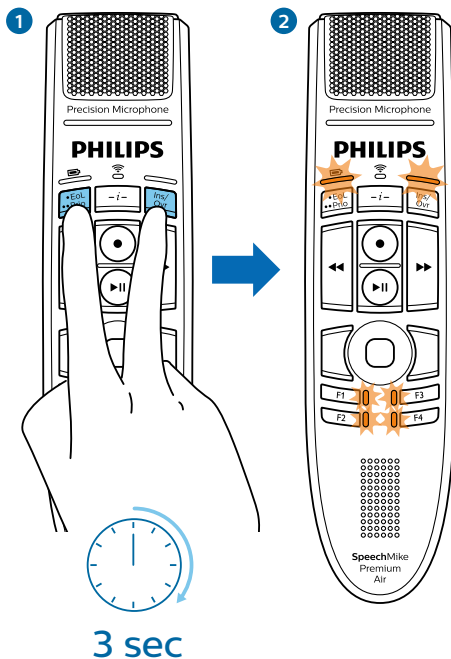

- Select your mode
- Wählen Sie Ihren Modus
- Sélectionnez votre mode
- Selecione su modo
- Selezionare la modalità desiderata
- Selecteer uw modus
- Välj ett läge

<b>F1</b>	<ul style="list-style-type: none"> <li>Event mode (default)</li> <li>Mode de commande (standard)</li> <li>Modalità comando (standard)</li> <li>Åtgärdsläge (standard)</li> </ul>	<ul style="list-style-type: none"> <li>Befehlsmodus (voreingestellt)</li> <li>Modo comando (estándar)</li> <li>Opdrachtmodus (standaard)</li> </ul>
<b>F2</b>	<ul style="list-style-type: none"> <li>Keyboard mode</li> <li>Mode clavier</li> <li>Modalità tastiera</li> <li>Tangentbordsläge</li> </ul>	<ul style="list-style-type: none"> <li>Tastaturmodus</li> <li>Modo teclado</li> <li>Toetsenbordmodus</li> </ul>
<b>F3</b>	<ul style="list-style-type: none"> <li>Browser mode</li> <li>Modo navegador</li> <li>Webbläsarläge</li> </ul>	<ul style="list-style-type: none"> <li>Browsermodus</li> <li>Modalità browser</li> <li>Browsermodus</li> </ul>
<b>F4</b>	<ul style="list-style-type: none"> <li>Windows speech recognition mode</li> <li>Windows Spracherkennungsmodus</li> <li>Mode de reconnaissance vocale Windows</li> <li>Modo reconocimiento de voz Windows</li> <li>Modalità riconoscimento vocale Windows</li> <li>Windows-spraakherkenningsmodus</li> <li>Läget Windows taligenkänning</li> </ul>	<ul style="list-style-type: none"> <li>Befehlsmodus (voreingestellt)</li> <li>Modo comando (estándar)</li> <li>Opdrachtmodus (standaard)</li> </ul>
<b>•EoL</b>	<ul style="list-style-type: none"> <li>Dragon for Mac mode</li> <li>Mode Dragon pour Mac</li> <li>Modalità Dragon per Mac</li> <li>Läget Dragon för Mac</li> </ul>	<ul style="list-style-type: none"> <li>Dragon-Modus für Mac</li> <li>Modo Dragon para Mac</li> <li>Dragon-modus voor Mac</li> </ul>
<b>Ins/Ovr</b>	<ul style="list-style-type: none"> <li>Dragon for Windows mode</li> <li>Dragon-Modus für Windows</li> <li>Mode Dragon pour Windows</li> <li>Modo Dragon para Windows</li> <li>Modalità Dragon per Windows</li> <li>Dragon-modus voor Windows</li> <li>Läget Dragon för Windows</li> </ul>	<ul style="list-style-type: none"> <li>Dragon-Modus für Mac</li> <li>Modo Dragon para Mac</li> <li>Dragon-modus voor Mac</li> </ul>



Find more information on all button modes here: [www.speechmike.com/premium-air/support](http://www.speechmike.com/premium-air/support)

Weitere Informationen zu allen Tastenmodi finden Sie hier: [www.speechmike.com/premium-air/support](http://www.speechmike.com/premium-air/support)

De plus amples informations sur les modes des boutons sont disponibles ici : [www.speechmike.com/premium-air/support](http://www.speechmike.com/premium-air/support)

Encuentre más información acerca de todos los modos de botones aquí: [www.speechmike.com/premium-air/support](http://www.speechmike.com/premium-air/support)

Ulteriori informazioni su tutte le modalità pulsante sono disponibili qui: [www.speechmike.com/premium-air/support](http://www.speechmike.com/premium-air/support)


Hier vindt u meer informatie over alle toetsenmodi: [www.speechmike.com/premium-air/support](http://www.speechmike.com/premium-air/support)

För mer information om alla knapplägen: [www.speechmike.com/premium-air/support](http://www.speechmike.com/premium-air/support)



### Overview (Event mode)

- Übersicht (Befehlsmodus)
- Descripción general (Modo comando)
- Overzicht (Opdrachtmodus)
- Présentation (Mode de commande)
- Panoramica (Modalità comando)
- Översikt (Åtgärdsläge)

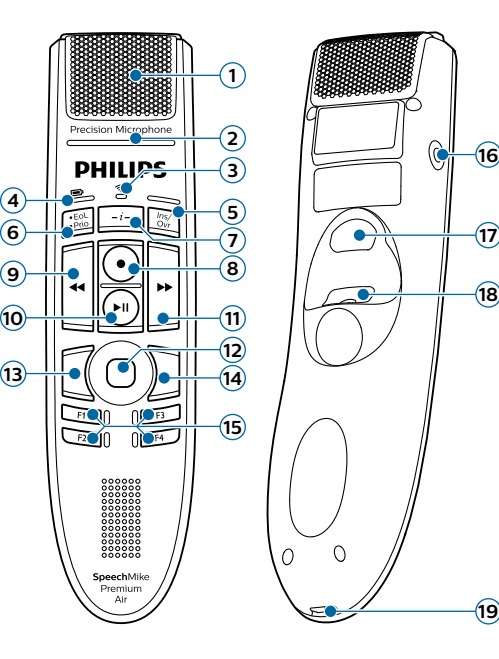

- 1 Microphone / Mikrofon / Micrófono / Microfoon
- 2 Record LED / Aufnahmeanzeige / LED d'enregistrement / LED de grabación / LED di registrazione / Opname-LED / Inspelning-LED
- 3 LED for wireless connection / LED für drahtlose Verbindung / LED de connexion sans fil / LED de conexión inalámbrica / LED di connessione wireless / LED voor draadloze verbinding / LED för trådlös anslutning
- 4 Battery LED / LED de batterie / LED di batteria / Batteri-LED
- 5 Insert/overwrite / Einfügen/Überschreiben / Insérer/écraser / Insertar/sobrescribir / Inserimento/Sovraregistrazione / Invoegen/overschrijven / Lägg till/Skriv över
- 6 End-of-letter (EOL), priority / Briefende (EOL), Priorität / Fin de lettre (EOL), priorité / Fin-de-carta (EOL), prioridad / Fine-lettera (EOL), priorità / Einde-brief (EOL), prioriteit / End-of-letter (EOL), prioriteit
- 7 Instruction / Anweisung / Instrucción / Istruzione / Instruktion
- 8 Record / Aufnahme / Grabar / Registrare / Registrare / Spela in
- 9 Rewind / Rücklauf / Retour / Riavvolgimento / Spola tillbaka
- 10 Play/pause / Wiedergabe/Pause / Lecture/pause / Reproducir/pausa / Riproduzione/Pausa / Afspele/pauze / Spela upp/Paus
- 11 Fast-forward / Schneller Vorlauf / Avance rapide / Avanti veloce / Snabbspola framåt
- 12 Touch navigation/left mouse button / Touch-Navigation/linke Maustaste / Navigation tactile/bouton gauche de souris / Navegación táctil/botón izquierdo del ratón / Navigazione touch/pulsante sinistro del mouse / Touchnavigatie/linker muisknop / Touch-navigering/vänster musknapp
- 13 Left mouse button / Linke Maustaste / Bouton gauche de souris / Botón izquierdo del ratón / Pulsante sinistro del mouse / Linker muisknop / Vänster musknapp
- 14 Right mouse button / Rechte Maustaste / Bouton droit de souris / Botón derecho del ratón / Pulsante destro del mouse / Rechter muisknop / Höger musknapp
- 15 Programmable function keys / Programmierbare Funktionstasten / Touches de fonction programmables / Botones con función programable / Pulsanti funzione programmabili / Programmeerbare functietoetsen / Programmerbara funktionsknappar
- 16 On/Off / Marche/Arrêt / Accensione/spegnimento / Pá/Av
- 17 Command button / Befehlstaste / Bouton de commande / Botón de comando / Pulsante di comando / Commandknop / Kommandoknapp
- 18 Left mouse button / Linke Maustaste / Bouton gauche de souris / Botón izquierdo del ratón / Pulsante sinistro del mouse / Linker muisknop / Vänster musknapp
- 19 USB connection / Port USB / Connessione USB / USB-anslutning

- 7 Instruction / Anweisung / Instrucción / Istruzione / Instruktion
- 8 Record / Aufnahme / Grabar / Registrare / Registrare / Spela in
- 9 Rewind / Rücklauf / Retour / Riavvolgimento / Spola tillbaka
- 10 Play/pause / Wiedergabe/Pause / Lecture/pause / Reproducir/pausa / Riproduzione/Pausa / Afspele/pauze / Spela upp/Paus
- 11 Fast-forward / Schneller Vorlauf / Avance rapide / Avanti veloce / Snabbspola framåt
- 12 Touch navigation/left mouse button / Touch-Navigation/linke Maustaste / Navigation tactile/bouton gauche de souris / Navegación táctil/botón izquierdo del ratón / Navigazione touch/pulsante sinistro del mouse / Touchnavigatie/linker muisknop / Touch-navigering/vänster musknapp
- 13 Left mouse button / Linke Maustaste / Bouton gauche de souris / Botón izquierdo del ratón / Pulsante sinistro del mouse / Linker muisknop / Vänster musknapp
- 14 Right mouse button / Rechte Maustaste / Bouton droit de souris / Botón derecho del ratón / Pulsante destro del mouse / Rechter muisknop / Höger musknapp
- 15 Programmable function keys / Programmierbare Funktionstasten / Touches de fonction programmables / Botones con función programable / Pulsanti funzione programmabili / Programmeerbare functietoetsen / Programmerbara funktionsknappar
- 16 On/Off / Marche/Arrêt / Accensione/spegnimento / Pá/Av
- 17 Command button / Befehlstaste / Bouton de commande / Botón de comando / Pulsante di comando / Commandknop / Kommandoknapp
- 18 Left mouse button / Linke Maustaste / Bouton gauche de souris / Botón izquierdo del ratón / Pulsante sinistro del mouse / Linker muisknop / Vänster musknapp
- 19 USB connection / Port USB / Connessione USB / USB-anslutning

- 14 Right mouse button / Rechte Maustaste / Bouton droit de souris / Botón derecho del ratón / Pulsante destro del mouse / Rechter muisknop / Höger musknapp
- 15 Programmable function keys / Programmierbare Funktionstasten / Touches de fonction programmables / Botones con función programable / Pulsanti funzione programmabili / Programmeerbare functietoetsen / Programmerbara funktionsknappar
- 16 On/Off / Marche/Arrêt / Accensione/spegnimento / Pá/Av
- 17 Command button / Befehlstaste / Bouton de commande / Botón de comando / Pulsante di comando / Commandknop / Kommandoknapp
- 18 Left mouse button / Linke Maustaste / Bouton gauche de souris / Botón izquierdo del ratón / Pulsante sinistro del mouse / Linker muisknop / Vänster musknapp
- 19 USB connection / Port USB / Connessione USB / USB-anslutning